



# **COOKTOP PARTS**

30" ELECTRIC FREESTANDING SELF CLEAN RANGE

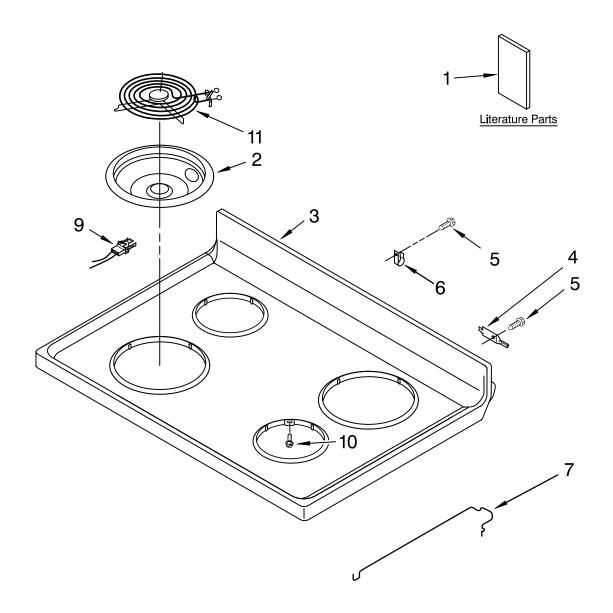

Illus No.		DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9763001 W10115599 9762996 9757142 9757143	Literature Parts Owners Manual Tech Sheet Instructions, Installation Template, Anti-Tip English/Spanish English/French Safer Cooking Tips	2	3196206 3196207 3196202 3196203 8522881 8522882 3186231	Bowl, Drip 6" Gray 8" Gray 6" Black 8" Black 6" Espresso 8" Espresso Cooktop White	4 5 6 7 9 10	3195060 3196178 308605 3195812	Hinge, Cooktop (2) Screw Strain Relief Rod, Support (2) Receptacle, Elmnt Screw Element, Surface 6" (2)
				8272527 3186233				


## **CONTROL PANEL PARTS**

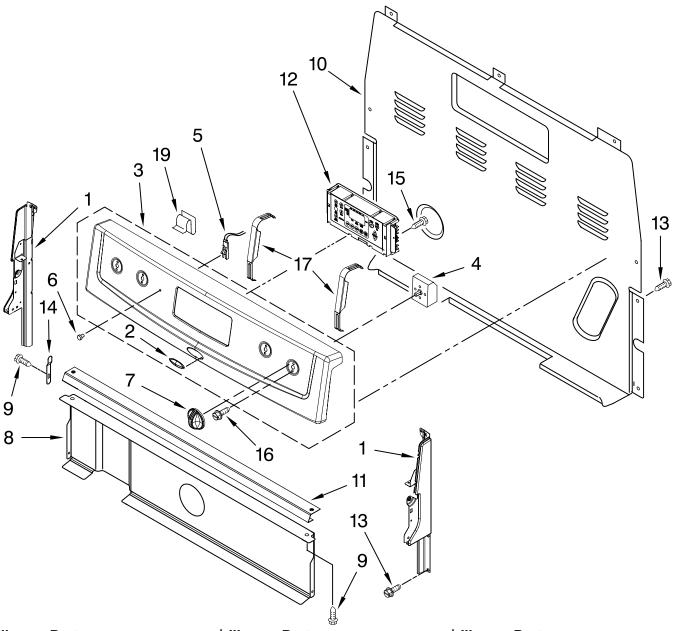

Illus No.		DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus No.		DESCRIPTION
2 3	W10009090 W10009040 W10009050 W10009060 W10009070	White	5 6 7	3148952 3148954 3148952 8523265 3196068 9761964 9761962 9761963	White	9 10 11 12 13 14 15 16 17	9762095 W10108100 W10108090 W10108110 3196178 3196200 3196169 3400882	Cover, Upper Brkt-Mntg,Console Control, Range Black White Biscuit Screw Clip, Spring Screw Screw Brkt-Mntg, EOC

# **CHASSIS PARTS**

For Models: RF264LXSQ1, RF264LXST1, RF264LXSB1 (Designer White) (Designer Biscuit) (Black)

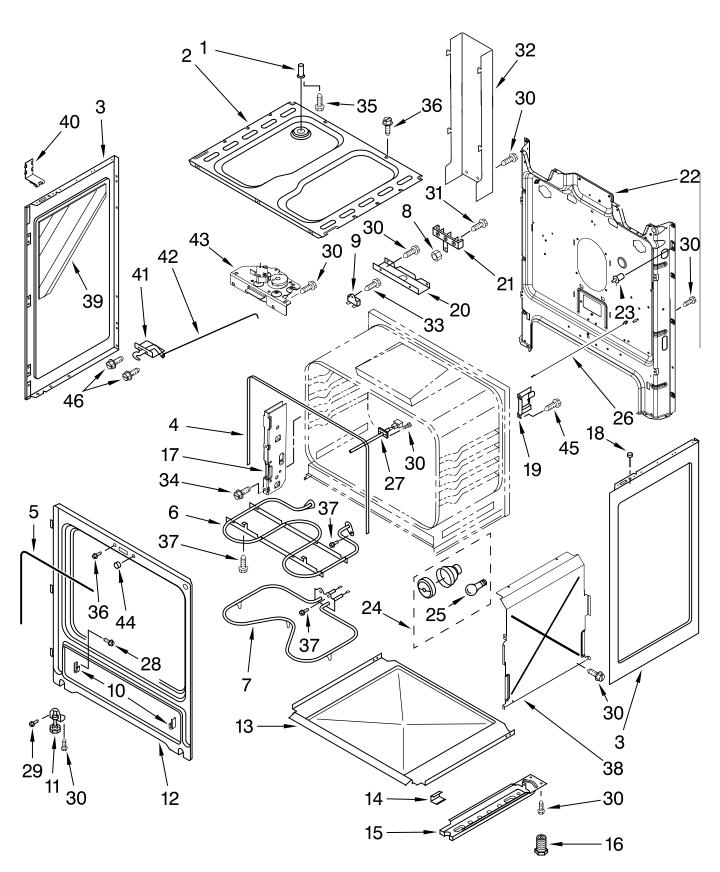


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

## **CHASSIS PARTS**


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus No.	. Part No.	DESCRIPTION
1	9755804	Vent Tube	15	9760314	Rail, Base (2)	33	3196172	Screw
2	3186144	Box, Burner	16		Foot, Rear (2)	34	W10031780	Screw
3		Panel, Side (2)	17	9760407	Brkt-Mntg, Dr Hinge	35	3196567	Screw
	8053830	White-Textured	18		Bumper, Side (2)	36	3196168	Screw
	8272519	Biscuit-Textured	19		Support, Oven (2)	37	3196174	Screw
	8053832	Black	20	3186034	Bracket, Service	38	9758238	Retainer, Side (2)
4		Seal, Oven Flange	21	9761958	Block, Terminal	39		Insulation
5		Seal, Oven Door	22		Back, Main	40	9761512	Clip, Mounting
6	9757340	Element, Broil	23	9757262	Switch, Door	41		Latch, Door
7		Element, Bake	24		Light Socket Assy	42		Rod, Latch
8	112432		25		Bulb, Oven Light	43	W10107820	Latch Asy, Rear
9		Fuse, Thermal	26	9757239	Rod, Door Switch	44	9758701	Spacer, Door
10	9759785	Glide, Drawer Frnt			Rear Mount	45	3196169	=
11	3196037	Foot, Front (2)	27		Sensor, Oven	46	3196560	Screw (2)
12		Frame, Front	28	3196165	Screw			
		(Not Serviced)	29	3196179		INS	ULATION	
13	8054068		30	3196178				
14	3196576	Clip, Panel (6)	31	3400016				Insulation, Wrap
			32	9758283	Cover, Box		8272612	Insulation, Back

## **DRAWER & BROILER PARTS**

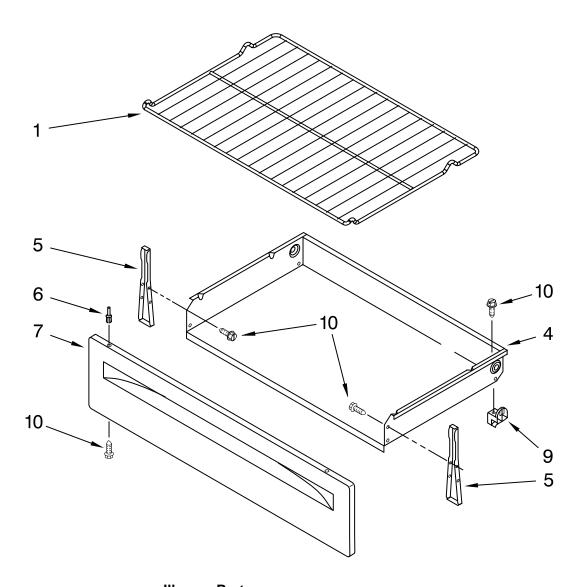

Illus.	Part	
No.	No.	DESCRIPTION
1	3195710	Rack, Oven (2)
4	9761030	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
7		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
	8053341	Black
9	8053334	Glide, Drawer (2)
10	3196168	Screw

### **DOOR PARTS**

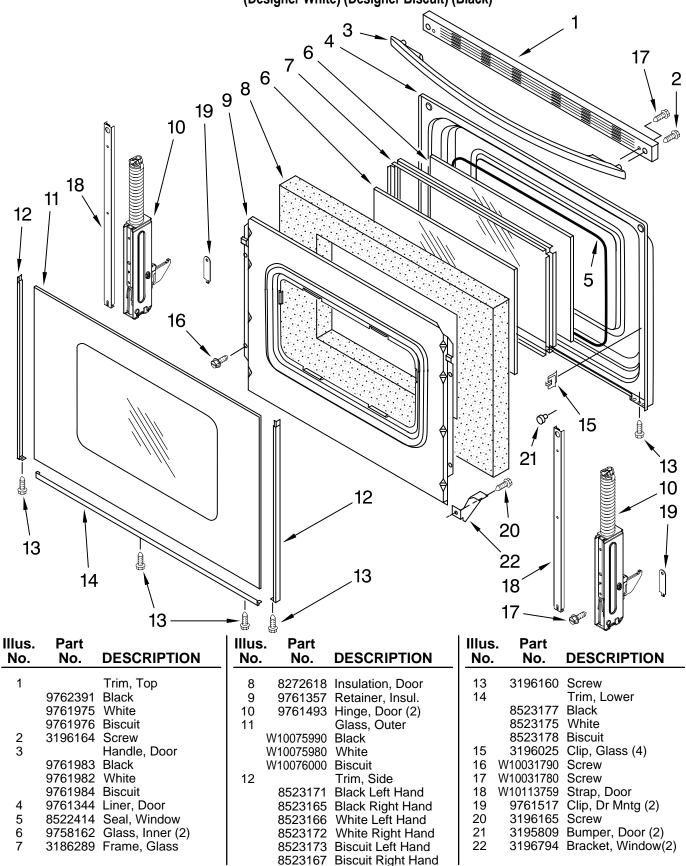

### **OPTIONAL PARTS**

For Models: RF264LXSQ1, RF264LXST1, RF264LXSB1 (Designer White) (Designer Biscuit) (Black)

No. No. DESCRIPTION

Parts Not Illustrated and Optional Parts (Not Included)

### SPLICING WIRES--25FT.

**Part** 

#### **LENGTH**

Illus.

242828 Wire, Black 12 Ga. 150° c 242821 Wire, Blue 14 Ga. 150°c 242822 Wire, Brown 14 Ga. 150°c 242830 Wire, Brown 14 Ga. 200°c 242823 Wire, Green 14 Ga. 150°c 242824 Wire, Orange 14 Ga. 150°c 242825 Wire, Red 14 Ga. 150°c 242831 Wire, Red 14 Ga. 200°c 242827 Wire, Yellow 14 Ga. 150°c

#### **REFINISHING MATERIAL**

799832 Kit, Porcelain Repair (White) 242756 Touch-Up Self-Clean(1/2 Pt) 261582 Grease Illus. Part
No. No. DESCRIPTION

#### INSULATION

261514 Insulation, Fiberglass (1–1/2" x 24" x 120") 240132 Insulation, Fiberglass (2–1/2" x 22" x 120")

#### PAINT, TOUCH-UP (1/2oz.)

72017 White 4392899 Biscuit 511873 White Porcelain (2 Oz.)

# PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White 4392901 Biscuit 285006 Superior Black 206922 Primer (White)

#### PAINT, BULK (1 qt.)

799344 White (Uncut) 4392900 Biscuit (Uncut) Illus. Part No. No. DESCRIPTION

#### **ACCESSORY PARTS**

241430 Foil, Aluminum Oven (18" x 25') 3184478 Cleaner, Glass 4396923 Broiler Pan Assy

#### **ANTI-TIP KIT**

W10017440 Anti-Tip Kit

#### **WIRING HARNESS PARTS**

W10114335 Harness, Wire (Main)
W10084660 Harness, Wire Door Switch/Sensor
9761476 Harness, Wire (Surface Unit)
311227 Wire, Ground
3196154 Screw
313660 Clip, Wire Ground
3196173 Screw

#### Miscellaneous

3196897 Pin Kit-Dr Removal

W10122973 7